Electrolux

Enviro Steamer Hand Gun Owner's Guide

Household Type

350 Series

IMPORTANT

For any advice on your cleaner, pleaser refer to your local telephone directory for your nearest Electrolux Service Agent. If you reside in the UK please contact the Customer Care line 08706 055055

INDEX

Important Safeguards 2
Service Information 4
Use & Assembly 6-8
Maintaining 8
Problem Solving 10
Guarantee 11

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS STEAM CLEANER.

WARNING

To reduce the risk of fire, electric shock, or injury:

- Do not use outdoors.
- Do not leave steam cleaner when plugged in. Unplug the electrical cord when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used near children, pets and plants.
- Use only as described in this manual. Use only manufacturer's recommended accessories.
- Do not use with damaged cord or plug. If steam cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center before using.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or steam cleaner with wet hands or operate without shoes.
- Do not put any object into openings. Do not use with any opening blocked.
- Store your steam cleaner indoors in a cool, dry area.
- Keep your work area well lighted.
- **Never turn the appliance over or on its side when using steam. Never direct steam towards people, animals, plants, and equipment with electrical components, such as the interior of ovens.**
- Do not immerse the steam cleaner into water or other liquids. Always unplug the power cord from the electrical socket when filling the steam cleaner.
- **Never put descaling, aromatic, alcoholic or detergent products into the steam cleaner, as this may damage it or make it unsafe for use.**
- **Do not operate without safety cap in place.**
- ⚠ Before filling, proceed as follows: 1) unplug the power supply, 2) relieve pressure by depressing steam delivery button, 3) allow steamer to cool down for three minutes, 4) relieve any built up pressure again by depressing steam delivery button, 5) slowly unscrew safety cap (see page 6, item 5) and wait 5 seconds before removing.
- ⚠ **Metal tips on nozzles will get hot during use.** Do not touch hot surfaces. Allow the attachments to cool down before replacing them while the appliance is being used.
- This appliance is intended for household use only.
- Any repair work, including the replacement of the power cord must only be carried out by an Authorized Electrolux Service technician because a special tool is required. Call for nearest service location.

- This appliance is intended for domestic use only.
- This appliance is in conformity with directive 89/336 EEC relevant to electromagnetic compatibility.
- In the event that you decide to dispose of the appliance, we advise you to make it inoperative by cutting off the power cord. We also recommend that any parts that could be dangerous be rendered harmless, especially for children, who may play with the appliance or its parts.
- Packaging must never be left within the reach of children since it is potentially dangerous.

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

PLEASE KEEP THESE INSTRUCTIONS

GENERAL INFORMATION

The steamer is designed as a complete change from old methods of traditional cleaning. This appliance is designed as a multi-purpose cleaner with a variety of applications.

Service Information

The instructions in this booklet serve as a guide to routine maintenance. For additional service information telephone Electrolux Customer Care on **08706 055055 (for UK residents only)**. You should know the model and type when you call.

Rating Plate

The model and type are indicated on the rating plate located on the bottom of the cleaner. For prompt and complete service information, always refer to these numbers when inquiring about service.

Model & Type_____

MODEL	TYPE	
VOLTZ	WATTS	HERTZ
	Electrolux	

BEFORE YOU START CHECK THE VOLTAGE

First check the voltage shown on the data plate (see rear view) to make sure that the cleaner is of the correct voltage for your electricity supply. If it is not, do not use the cleaner but refer back to the retailer.

CONNECTING TO YOUR ELECTRICITY SUPPLY

Permanently connected to the cleaner is a mains supply (2-core) cable fitted with a non-rewirable plug incorporating a 13A fuse.

In the event of the fuse requiring replacement the fuse cover should be removed using a small screwdriver. The old fuse **MUST** be replaced by a 13A ASTA approved BS1362 fuse or a BSI approved fuse. The cover must be replaced before the plug is used again. In the event of loss of the fuse cover, replacements can be obtained from your Electrolux dealer or Electrical Retailers and must be of the same colour as indicated by the coloured insert on the base of the plug.

If difficulty is experienced in obtaining a replacement, contact Electrolux on 08706 055055.

In no circumstances must the plug be used without a correct fuse cover fitted.

If the plug that is fitted to your appliance is not suitable for your socket outlet, it must be cut off and the appropriate plug fitted.Remove the fuse from the cut off plug.The cut off plug should then be disposed of to prevent the hazard of shocks in case it should be plugged into a 13 amp socket in another part of your home.

The wires in the mains cable of this appliance are coloured in accordance with the following code: **Blue: Neutral. Brown: Live. Green/Yellow: Earth.**

As the colours of the wires in the mains cable of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

The wire which is coloured yellow and green must be connected to the terminal which is marked with a letter E or coloured yellow and green.

It is in your interest to ensure that the plug is correctly attached to the mains cable. In case of doubt, have it done by a qualified electrician, as Electrolux cannot regard the repair of faults on the plug connection as a service that can be given free of charge under the terms of the guarantee.

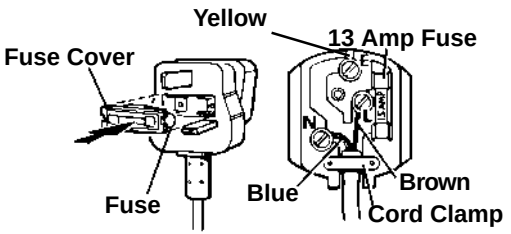

WARNING

If the mains supply cable becomes damaged during cleaning the following action should be taken:

1. Switch off and remove the plug from the socket outlet.
2. Examine the mains supply cable for damage (only after removing the plug from the socket outlet).
3. If there is any sign of damage to the supply cable it MUST be renewed. The repair MUST be carried out by Electrolux Service Staff or a similar qualified person.
4. **NEVER** use the machine with a damaged mains supply cable.

The wire which is coloured yellow and green must be connected to the terminal which is marked with a letter E or coloured yellow and green.

Thermal Cut Off

This steam cleaner has a special thermostat that protects the cleaner in case of overheating. If the cleaner suddenly shuts off, push the switch pedal once and unplug the cleaner. Check the cleaner for a possible source of overheating such as no water in the tank. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the cleaner. After the 30 minute period, plug the cleaner back in and turn on the switch. If the cleaner still does not heat up, please call Electrolux on **08706 055055** if you reside in the UK.

Description of the Steam Gun hand held steamer

1. Body
2. Handle
3. Steam Delivery Button
4. Articulated Nozzle
5. Safety Cap
6. Power On Light
7. Electrical Cord
8. Rubber Gasket

ACCESSORIES

9. Measuring Cup
10. Funnel
11. Straight Nozzle
12. Fabric Tool
13. Cloth for Fabric Tool
14. Window Cleaner
15. Flexible Extension Hose
16. Scrub Brush
17. Angled Nozzle

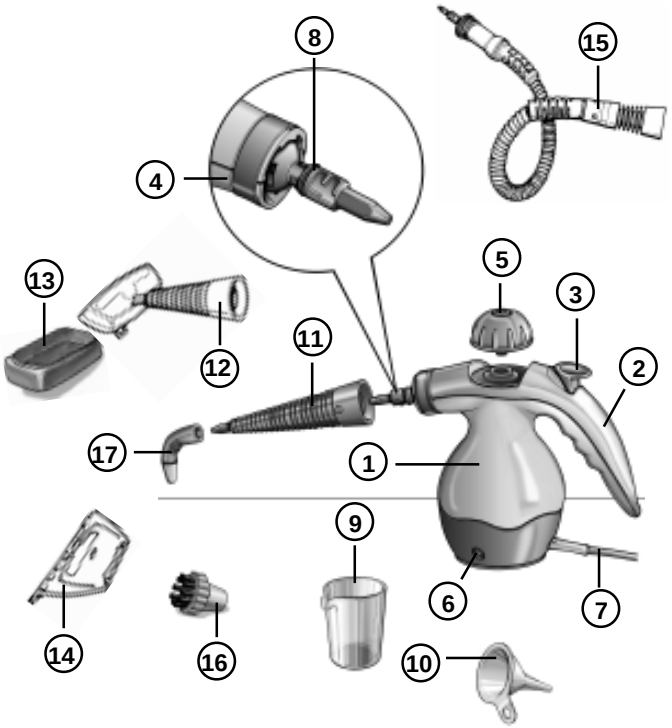

Main Features of the Steam Gun hand held steamer

Thank you for having chosen our product and allow us to congratulate you for having purchased the Electrolux Steam Gun.

The Electrolux Steam Gun achieves a high degree of hygienic and degreasing power on many surfaces. It turns water into steam in just a few minutes, so when contact is made with surfaces dirt and grime is removed.

Since the Electrolux Steam Gun uses the active power of steam without the use of detergents or soap, it is safe for the environment.

Some surfaces that can be cleaned with the Steam Gun are: upholstery, sealed grout, bathroom and kitchen tile, stove tops, removable exhaust filter over stoves, windows and mirrors.

The fabric tool may be used to steam wrinkles out of clothing, window coverings, etc. **CAUTION: Do not direct steam at the body.**

Other Advantages of the Electrolux Steam Gun hand held steamer

The Electrolux Steam Gun can kill dust mites and some types of bacteria, such as salmonella and E-coli when used properly.

To disinfect a specific area, position the steamer over the area, not more than 1 inch away and slowly move across the surface. Use this procedure to disinfect surfaces in: the bathroom, food preparation areas, pillows and bedding, pet sleeping quarters, etc.

INSTRUCTIONS FOR USE

The Electrolux Steam Gun is designed to thoroughly clean hard surfaces and upholstery that will withstand high heat. Do not use on soft plastics, unsealed wood, and cold glass.

WARNING: On surfaces that have been treated with wax or some non wax floors, the sheen may be removed by the heat and steam action. Do not use on unsealed wood. This could cause the woodgrain to rise.

It is therefore recommended that a sample cleansing be carried out on an isolated area of the surface to be cleaned. Also, check use and care instructions from the manufacturer on the object you want to clean.

HOW TO ASSEMBLE AND USE

Do not plug unit into an electrical outlet until Step 7.

WARNING: After every use, press steam delivery button until all pressure has been released before removing safety cap.

1. Unscrew the safety cap. (After first use, turn the appliance over in order to completely empty the boiler.)
2. Fill the measuring cup with water to the marked water line, once. Use the funnel to pour the water into the boiler. The boiler takes only one measuring cup of water at a time. (6 oz. maximum) **Do not overfill.**

NOTE: Never put descaling, aromatic, alcoholic or detergent products into the appliance, as this may damage it or make it unsafe for use.

3. Screw the cap back onto the appliance.

Attachments

4. The straight nozzle, flexible hose and fabric tool all attach using the following directions.

Straight Nozzle

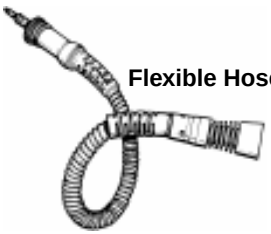

Flexible Hose

Fabric Tool

Align the single mark on the attachment to the single mark on the appliance. Push the attachment onto the articulating nozzle until it stops against the appliance's body. Turn in a clockwise direction until the single mark on the attachment is aligned with the double mark on the appliance. The attachment is now locked into position.

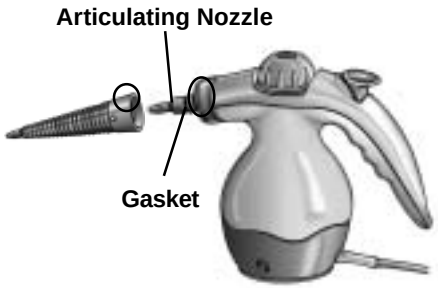

HOW TO ASSEMBLE AND USE (continued)

The Steam Gun's articulating nozzle allows the steam to be directed as desired. To use the articulating nozzle, align the single marks on the attachment and appliance, push the attachment onto the articulating nozzle until it covers the round gasket (See page 6). Now turn clockwise until the single mark on the attachment is aligned with the double mark on the appliance. Now you can direct the steam as desired.

5. To attach the scrub brush and angled nozzle.

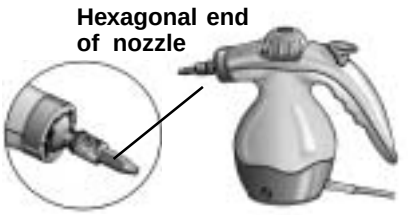

Scrub Brush **Angled Nozzle**

Both of these attachments can be applied to the articulated nozzle (on appliance) straight nozzle, and the flexible extension hose.

Decide on your desired angle, then push the attachment onto the hexagonal end of the nozzle.

6. To attach the window cleaning tool.

CAUTION: Do not use the window cleaning tool on cold glass. It may break the glass.

First attach the fabric tool to either the appliance or the flexible extension hose. Remove the cloth from the fabric tool. There are two open tabs on the back edge of the fabric tool and there are two hinges on the back edge of the window cleaning tool. Place the hinges into the open tabs, then swing the window cleaning tool up against the bottom of the fabric tool until the two pieces click together. To remove the window cleaning tool from the fabric tool. Just push your thumb against the fastener on the window cleaning tool, they will separate.

Window Cleaning Tool **Fabric Tool**

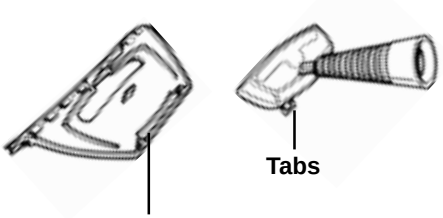

How to start the Steam Gun

7. Plug the appliance into an electrical outlet.

   The power on light will come on. Steam will be ready after about 3 to 4 minutes. Do not leave the appliance unattended during the waiting period. Press steam delivery button to release steam.

As soon as the Steam Gun emits steam, begin using it, passing slowly over the surfaces to be cleaned. This is the ideal method for thoroughly cleaning your surfaces. To disinfect specific areas, leave the Steam Gun over the spot, no more than 1 inch and slowly move across the surface.

WARNING: Never turn the hand held steamer over when using steamer, or direct steam at any person, animal, or plant.

How to refill the Steam Gun when it is out of steam.

8. Unplug the appliance. **Press steam delivery button until all pressure has been released. Wait for about 3 minutes** before carefully unscrewing the safety cap. Turn slowly a half turn and wait for the hissing noise created by residual steam to stop. Unscrew the cap completely and allow to cool. Slowly pour one measuring cup (included) into the boiler using the funnel, (included). (6 oz. maximum) **Do not overfill.** Screw the safety cap back on the appliance. Plug the appliance into electrical outlet and steam will start to be produced as before.

WARNING: This unit is under pressure. After every use, press steam delivery button until all pressure has been released before removing safety cap.

Cleaning and Maintenance

NOTE: The appliance must be unplugged from the electrical outlet and allowed to cool down before all cleaning and maintenance tasks.

9. Let the appliance cool down completely before cleaning it or putting it away.

10. After each use empty any remaining water from the boiler.

11. Store in a dry, cool place.

12. In order to guarantee perfect functioning over a long period of time, the boiler needs to be rinsed out with water once a month to eliminate any accumulated calcium deposits. **Do not use vinegar or other descaling substances.** Put in one measure of water, replace the safety cap and shake to loosen any accumulated deposits. Remove safety cap and immediately empty water into a sink. **CAUTION: Do not immerse the appliance in water.**

Suggested Uses for Attachments

Scrub Brush

Stovetops, countertops, sealed grout, inside trash receptacles.

Fabric Tool

Steaming clothes, upholstery, window coverings.
It is suggested that the flexible hose and the cloth is used with the fabric tool when used on clothing, upholstery and window coverings.

Window Cleaner

Windows, mirrors, glass doors. **Do not use on cold windows or glass. It may break.**

Straight Nozzle

Edging, window sills, ledges, tile, mantles.

Angled Nozzle

Difficult to reach areas, toilet bowls, window sills.

Flexible Hose

Areas requiring additional reach. This attachment can be used with all the other tools.

PROBLEM SOLVING

NOTE: Unplug the electrical cord before servicing.

PROBLEM	CAUSE	SOLUTION
Appliance won't start	☑ Electric plug	☐ Push plug securely into outlet. Verify power 'On' light is on. ☐ Try another outlet. ☐ Check circuit breaker.
	☑ No water in tank	☐ Check the tank for water.
Appliance won't make steam	☑ No water in tank	☐ Check the tank for water.
Appliance spits water out of nozzle	☑ Too much water in tank. Do not overfill.	☐ Check the water level in the tank.
	☑ Unit positioned upside down.	☐ Use in upright position.
	☑ Not fully preheated.	☐ Allow more time for water to heat up.
Water boils out of fill spout when adding water.	☑ Water tank too hot.	☐ Allow more time for cooling. ☐ Add water slowly. ☐ Use special funnel provided.
Accessories will not stay on.	☑ Not properly installed.	☐ Check for proper assembly. ☐ Review this guide for assembly instructions.
General questions	☑ Assembly or related accessories	☐ If you reside in the UK, you may contact the Customer Care line 08706 055055. Know the Model and Type numbers when you call.

Guarantee (for UK residents only)

This guarantee is in addition to your statutory and other legal rights.

This product is for household use only.

Electrolux products are carefully designed, manufactured, tested and inspected and, in consequence, we undertake to replace or repair any part found to be defective in material or workmanship, within one year of delivery to the original purchaser, free of charge. You may be required to take the product to your nearest service provider if the product requires attention during the first year.

There are certain conditions which may invalidate this guarantee:

a. It is dependent upon the appliance being correctly installed and used in accordance with the Company's instructions under normal domestic conditions within the United Kingdom or the Republic of Ireland.

b. Service at all times must be carried out by an Electrolux Service Representative or authorised agent.

c. The guarantee may be invalidated by unauthorised repair or modification of the appliance.

d. You may be charged by Electrolux if you call for an engineer to resolve a problem that we believe is covered in the instruction booklet.

The Company does not accept liability for defects arising from neglect, misuse or accident.

Proof of the date of purchase will be required before service under guarantee is provided. For further assistance call our Customer Care Line on 08706 055055.

Important:

For future reference we suggest you record the following details here, and keep the receipt with the handbook as proof of purchase.

Purchased from _____

Date purchased _____ Model no _____

Electrolux may introduce modifications to their product from time to time and consequently the details given in this booklet are subject to alteration without notice

Cod. 5065101300